

# OB4371

## Three phase Smart energy meter



# Contents

IMPORTANT SAFETY INSTRUCTIONS .....	1
BENEFITS AND MAIN FEATURES .....	3
1. TECHNICAL DESCRIPTION .....	4
1.1 METER SPECIFICATION .....	4
1.2 MOUNTING .....	5
2. SAFETY MEASURES .....	6
3. OPERATION .....	7
3.1 INITIALIZATION DISPLAY .....	7
3.2 SCROLL DISPLAY .....	7
3.3 CHANGE DEFAULT SETTINGS VIA BUTTONS .....	9
4. WIRING DIAGRAMS .....	10
4.1 TRANSFORMER CONNECTED METER .....	10
4.2 OTHER TERMINALS .....	10
4.3 RS485 WIRING .....	11
5. DIMENSIONS .....	11
6. AVAILABLE MEASUREMENTS .....	12
7. TARIFF CONTROL .....	14
8. DO REMOTE CONTROL .....	15
9. SOLAR PV & RENEWABLES .....	16
10. PROGRAMMABLE CT&PT .....	17
11.PULSE OUTPUT(Terminals 12, 13 & 15) .....	17
11.1 WHAT IS PULSE OUTPUT? .....	17
12.CLEAN .....	18
13.MAINTENANCE .....	18
14.TECHNICAL SUPPORT .....	18

## Important safety instructions – please read

This document contains important safety instructions. Please read all the instructions and cautionary markings on the product and on any accessories or additional equipment included in the installation. Failure to follow these instructions could result in severe shock or possible electrocution. Always use extreme caution to prevent accidents.

## Audience










Installation, maintenance, and connection of electrical equipment must be performed by qualified personnel, in compliance with local electrical standards, wiring rules and the requirements of local power authorities and/or companies. The Owen Brothers Metering strictly conforms to all related safety rules in design and test.

Safety regulations relevant to the location should be followed during installation, operation, and maintenance. Improper operation may cause electric shock, or damage to property, inverter, or equipment.

These instructions are for use by skilled, qualified personnel who:



- Meet all local and governmental code requirements for licensing and training for the installation of electrical power systems with AC voltages up to 600 volts.
- Hold the required qualifications for installing grid-connected systems.
- Have knowledge of the functional principles and operation of grid-connected systems and knowledge of the installation of electrical devices.
- Understand the risk associated with installing and using electrical devices and can implement appropriate risk management strategies.

## Symbols used in this manual

SYMBOL	DEFINITION	SYMBOL	DEFINITION	SYMBOL	DEFINITION
	<b>LETHAL DANGER!</b> Risk of electrocution.		<b>DANGER!</b> Risk of electrical shock.		<b>WARNING!</b> Hazard to human life or equipment
	<b>FIRE HAZARD!</b> Follow instructions to avoid.		This product has re-cyclable parts. Dispose of correctly.		Do not dispose as household waste
	Operator's manual; operating instructions				
	<b>Information.</b> The information provided is important for the correct installation, operation and or maintenance of the equipment. Failure to follow the recommendations could result in annulment of the equipment warranty.				<b>PPE.</b> Use appropriate personal protective equipment.

## General safety

### SYMBOL DEFINITION

- |  |   |
|--|---|
|  | <b>CAUTION: Equipment damage.</b><br>Only use components or accessories recommended or sold by Owen Brothers Metering Technologies or its authorised agents.              |
|  | <b>IMPORTANT.</b> Do not attempt to install this equipment if it appears to be damaged in any way. See the Warranty document for instructions on returning the equipment. |

## Personal safety

### SYMBOL DEFINITION



#### WARNING: PERSONAL INJURY

- For work safety guidance contact your local WHS authority.
- Use the correct PPE e.g., safety glasses, ear protection, steel-toed safety boots, safety hard hats, etc.
- Use standard safety practices when working with electrical equipment e.g., remove all jewellery, use insulated tools, wear cotton clothing etc.
- Never work alone when installing or servicing this equipment. Have an assistant nearby.
- Ensure that children, pets, and other animals are kept away from the worksite.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.



## Equipment safety

### SYMBOL DEFINITION



#### WARNING: LETHAL VOLTAGE

- Review the system to identify all possible sources of energy. Ensure all sources of power are disconnected before performing any installation or maintenance on this equipment. Confirm that the terminals are de-energised using a validated voltmeter (rated for a minimum 1000 VAC) to verify the deenergised condition.
- OB4371 contains no user-serviceable parts. Do not dismantle or attempt to repair the equipment. Do not perform any servicing other than that specified in the installation or maintenance instructions unless qualified to do so or have been instructed to do so by Owen Brothers Metering technical support personnel.
- To avoid electric shock, disconnect the AC input of the equipment at least 5 minutes before performing any installation or maintenance.



#### WARNING: FIRE HAZARD

- Ensure AC and ground cable sizes conform to local codes and are fit for purpose. See product manuals for minimum size requirements. Ensure all conductors are in good condition. Do not operate the unit with damaged or substandard cabling.



#### CAUTION: EQUIPMENT DAMAGE

- Static electricity may damage electronic components. Take proper steps to prevent such damage to the Inverter otherwise the warranty may be annulled.

# OB4371

## Active and reactive energy, import/export, Dual Sources/Tariffs, S0 output

- Modular DIN-rail housing, 4U (72mm Wide)
- Bidirectional energy used for renewable energy photovoltaic systems, wind etc.
- Charging stations for electric vehicles
- Accuracy class B according to EN50470-3:2022
- Transformer metering: ··· /5A, Voltage L-L from 100V up to 415V
- Allows configure the CTs, PTs, system wiring method Y/Δ
- LCD display, large clear backlight display for perfect reading
- Main electrical parameters measured and displayed for a cost effective consumption analysis
- Flashing metrological LED for energy consumption indication
- Monitor energy consumption via S0 Pulse output
- Dual source inputs for Utility / Generator backup measurement .
- Programmable Digital Output for Loadshedding , Reverse Relay , Export limitation etc.
- Built-in RS485 communication port, modbus protocol
- The programming switch is protected by lead seal on the upper cover



Security sealing



Multi-Measurements



Dual Sources Tariffs



Import/Export Energy Measuring



S0 Output : Programmable

## » 1. Technical description

### • 1.1 Meter specification

Nominal voltage(Un)	3P4W: 3×120/208V , 3×220/380V , 3×230/400V , 3×240/415V 3P3W: 3×208V , 3×380V , 3×400V , 3×415V
Voltage range(v)	VL-L : 100V to 415V
<b>» Current</b>	
- Iref(A)	5
- Itr(A)	0.5
- Imax(A)	6
- Imin(A)	0.05
- Ist(mA)	10
Power consumption of current circuits(VA)	< 1
Power consumption of voltage circuits(W)	< 1.3 , 6VA
Frequency (Hz)	50
Pulse constant(imp/kWh)	5000
Class	B
<b>» Relay Switching</b>	
Operating Voltage	250V AC
Max.Load Current	3A@25°C
Type of contact	Normally open
Coil resistance	720Ω
Contact resistance	100mΩ

## • 1.2 Mounting

OB4371 Meters are DIN rail mounted as per EN60715 international standards, to mount on DIN rail use a screwdriver to release the lever on the bottom of the meter casing.

A specially designed Panel Mount Adaptor for Standard 92mm x 92mm panel cutout is also available, Please contact [sales@owen-brothers.com](mailto:sales@owen-brothers.com) for further details.



Mounting	On 35mm rail, according to EN60715TH35 96x96mm panel kit
Voltage/Current terminals	1.5 ~ 2.5mm <sup>2</sup> /0.5Nm
Another terminals	0.5 ~ 1mm <sup>2</sup> /0.2Nm
RS485 cable	AWG18
Ambient temperature	-25°C ~ +55°C (Indoor meter)
Storage temperature	-40°C ~ +70°C (Indoor meter)
Mechanical environment	M1
Electromagnetic environment	E2
Protection against penetration of dust and water	IP51 ( frontal part )
Relative humidity	75% without condensation
Altitude	2000m
Protect class	II
Pollution degree	2

## » 2.Safety measures



**DANGER!** This warning means that a dangerous voltage may be present on the terminals even for short periods.



**WARNING!** Electrical instrument connections must be carried out only by skilled technicians who are aware of the risks involved to the presence of voltage.



- **Before connecting, check the following:**

1. The conductor wires are not Live.
2. The instrument is connected according to the appropriate diagram.
3. The power supply corresponds to the values on the instrument specification.
4. The instrument has been installed in a vibration-free and a suitable temperature environment.
5. The terminals are no longer accessible after being connected.
6. The wiring is carried out in accordance with the standards in force in the Country where the instrument will be installed.
7. A circuit breaker and an over-current device (eg. 250 mA T type fuse) are installed between the instrument power supply and the electrical system.
8. The connections are made respecting the polarities. Important: L1 of the voltage input = L1 of the ampere metric input.
9. Input and output polarities are respected when using current&voltage transformers, Rogowski coils.
10. The terminals are fixed in such a way that the connection wires cannot be accidentally disconnected.






## » 3. Operation

### • 3.1 Initialization Display





	<p>Full screen, display test It will last for 2 seconds</p>
	<p>Software &amp; Hardware version , CRC verify It will last for 2 seconds</p>












### • 3.2 Scroll display

The buttons operate as follow

	<p>Scroll up the display screen And change the parameter ( decrease 1 )</p>
	<p>Scroll down the display screen And change the parameter ( increase 1 )</p>
	<p>Confirm when a parameter has been changed</p>

Scroll display content


1		<p>Total active energy LED constant</p>
2		<p>Import active energy S02 output impulse/kWh</p>
3		<p>Export active CT ratio PT ratio</p>
4		<p>T1 active energy Serial number ( high 2 bits ) Serial number ( low 6 bits )</p>

5		T2 active energy Frequency
6		Total active power Total reactive power Total power factor
7		Phase to neutral voltage
8		Phase to phase voltage
9		Current each phase
10		Instantaneous active power of each phase
11		Instantaneous reactive power of each phase
12		Instantaneous apparent power of each phase
13		Instantaneous power factor
14		Baud rate Modbus id Parity
15		Software version Hardware version CRC verify

### 3.3 Change Default settings via buttons

After a long press ( 3 seconds ) of the set button, the set-up screen will appear.


Steps :

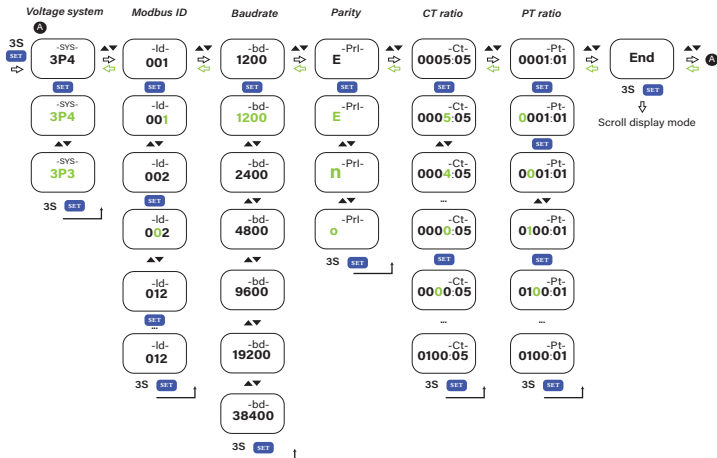


>> General	>> Unit	>> Default	>> Range
CT ratio	A	5:5	5-7500
PT ratio (Primary / Secondary)	/	1:1	1-350
Modbus ID	/	001	001---254
Baud rate	bps	9600	1200---38400
Parity	/	None	None,Even,ODD
Type of wiring	/	3P4W	3P4W( Y ) 3P3W( Δ )

## » 4.Wiring diagrams


### • 4.1 Transformer connected meter

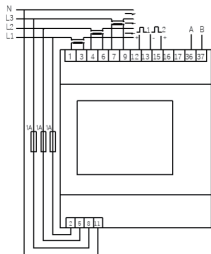

3P4W

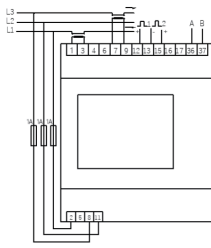


3P3W

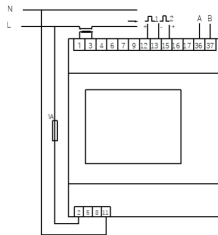

1P2W


1/3	L1 Current in & out
4/6	L2 Current in & out
7/9	L3 Current in & out
2/5/8/11	V1,V2,V3,N(3P4W)
2/11/8	V1,V2,V3 (3P3W)

### • 4.2 Other terminals




12&15	Programable S02 pulse output ( 12+, 15—)
13&15	Active test pulse output S01 contact ( 13+, 15—)
18&19	Dual source ( utility and generator) selection ( AC230V ~)
20&21	DO output
36	RS485 communication contact RS485A
37	RS485 communication contact RS485B

- 4.3 RS485 Wiring

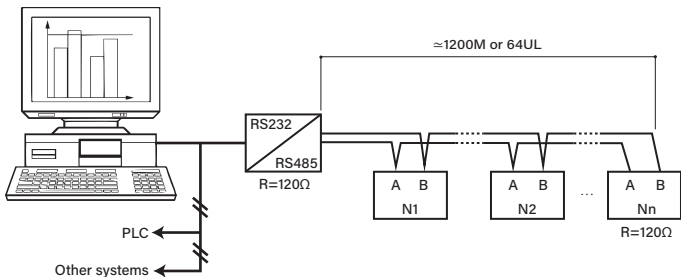

» 5. Dimensions (mm)

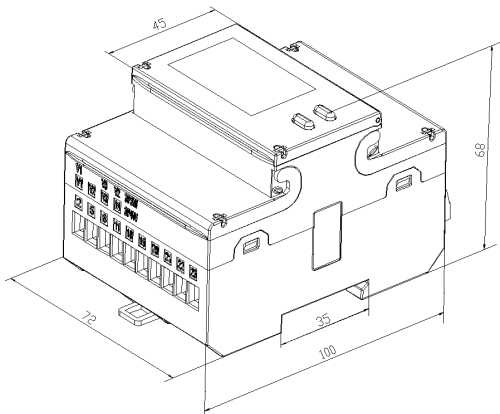

## » 6.Available measurements

» Active energy	» Unit	» System	» Reactive energy	» Unit	» System
Import (+) Total	kWh+	●	Import (+) Total	kvarh+	●
T1 import (+)	kWh+	●	T1 import (+)	kvarh+	●
T2 import (+)	kWh+	●	T2 import (+)	kvarh+	●
T3 import (+)	kWh+	●	T3 import (+)	kvarh+	●
T4 import (+)	kWh+	●	T4 import (+)	kvarh+	●
Export (-) total	kWh-	●	Export (-) total	kvarh-	●
T1 export (-)	kWh-	●	T1 export (-)	kvarh-	●
T2 export (-)	kWh-	●	T2 export (-)	kvarh-	●
T3 export (-)	kWh-	●	T3 export (-)	kvarh-	●
T4 export (-)	kWh-	●	T4 export (-)	kvarh-	●
Active energy net	kWh-	●	» Apparent energy	» Unit	» System
T1 active energy net	kWh-	●	Import (+)	kVAh	●
T2 active energy net	kWh-	●	Export (-)	kVAh	●
T3 active energy net	kWh-	●			
T4 active energy net	kWh-	●			

The following table shows the complete instrumentation functions of all OB4371 meters. Depending on the meter's setting all or a subset of the following functions are available.


» Electrical variable	» Unit	» 3P4W	» 3P3W	» 1P2W
Voltage L-N	V	●	-	●
Voltage L-L	V	●	●	-
Current L1	A	●	●	●
Current L2	A	●	-	-
Current L3	A	●	●	-
Current N	A	●	-	●
Current, Total	A	●	●	●
Active power, Total	W	●	●	●
Active power, L1	W	●	●	●
Active power, L2	W	●	-	-
Active power, L3	W	●	●	-
Reactive power, Total	var	●	●	●
Reactive power, L1	var	●	●	●
Reactive power, L2	var	●	-	-
Reactive power, L3	var	●	●	-
Apparent power, Total	VA	●	●	●
Apparent power, L1	VA	●	●	●
Apparent power, L2	VA	●	-	-
Apparent power, L3	VA	●	●	-
Power factor, Total	PF	●	●	●
Power factor, L1	PF	●	●	●
Power factor, L2	PF	●	-	-
Power factor, L3	PF	●	●	-
Frequency	Hz	●	●	●

## » 7.Tariff control

On meters with tariff functionality ,the tariffs are controlled either via by dual source input or communication .


» Multi-tariff mode	» Describe		
Dual source	Terminal 18,19 Terminal 18,19	AC= 0V AC= 230V	T1 active T2 active
Communication	T1 ,T2 ,T3 ,T4 optional		

TOU application:

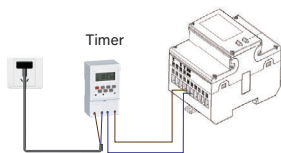

Compatible with timer for TOU.

Dual sources application:

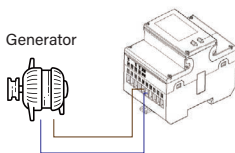


Compatible with generator for dual sources.



## » 8.DO remote control

The meter has 1 independent digital output. Use as Modbus remote controlled output .DO type: 5A,250V AC. Terminal 20 and 21 is DO contact.

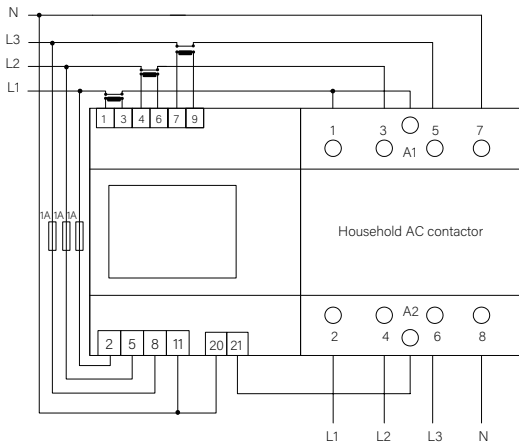

## » 9.Solar PV & Renewables

Import/export and generation metering are important features in three-phase energy metering systems. These features help monitor and record the flow of electricity in both directions (importing and exporting) and track the generation of electricity in renewable energy systems like solar or wind.

### Example Configuration:


#### Import/Export Metering (Meter 1):

**Import Metering:** This feature measures the electricity consumed by a facility from the grid, commonly referred to as "importing" electricity. It tracks the total energy consumption in kilowatt-hours (kWh) or other units, allowing users to monitor their electricity usage accurately.

**Export Metering:** In cases where a facility generates excess electricity, such as from solar panels, wind turbines, or other sources, this feature measures the electricity sent back to the grid, known as "exporting" electricity. It tracks the total energy exported to the grid in kWh or other units.

#### Generation Metering (Meter 2):

Generation metering is a crucial feature for renewable energy systems. It measures the electricity generated by the facility's renewable energy sources, such as solar panels. This allows users to monitor their energy production, track the performance of their renewable energy system, and potentially receive incentives or feed-in tariffs for excess electricity fed back into the grid.

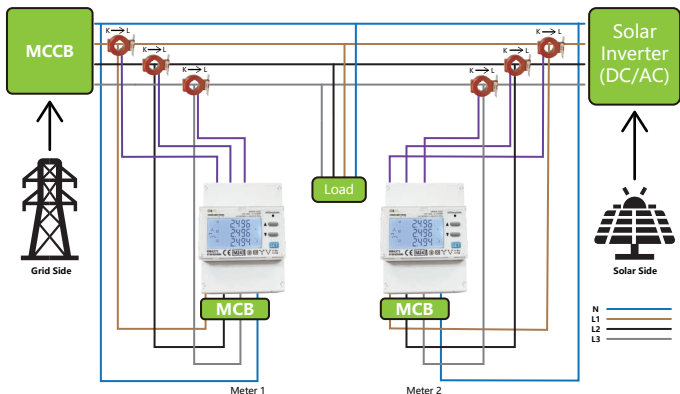

## » 10. Programmed CT&PT

The maximum setting range for CT ratio is 5-7500 , and the PT ratio setting range is 1-350 (primary voltage is 35kV)

## » 11. Pulse output (Terminals 12, 13 & 15)

The pulse output feature on your electricity meter allows you to monitor your energy consumption remotely and accurately. This section will guide you on how to use the pulse output terminals, which are labelled as 12 (Active Pulse) , 13 (Programmable pulse) and 15 (Common), to access this valuable information.

### • 11.1 What is Pulse Output?

The pulse output is a mechanism that generates electrical pulses at regular intervals to represent your electricity consumption. These pulses are typically used for remote calibration, monitoring, data collection, and billing purposes. Each pulse corresponds to a predefined amount of energy consumed, and by counting these pulses, you can track your electricity usage effectively.

## » 12.Clean

- Preparation:Ensure the smart meter is disconnected or powered off to avoid any electrical hazards during the cleaning process.
- Exterior Cleaning:Use a soft, dry cloth to gently wipe the surface of the smart meter. For stubborn stains or dirt, lightly dampen the cloth with water or a mild detergent solution and carefully wipe the affected areas.
- Drying and Reconnection:After cleaning, ensure the smart meter is completely dry before reconnecting or powering it back on. Verify that all connections are secure and that the meter is functioning correctly.

## » 13.Maintenance

Complying with the safety standards outlined in EN50470-3:2022, the OB4371 puts the safety of users and maintenance personnel first. For safe operation and maintenance, comprehensive safety information is provided in the maintenance manual The location of the live parts in the smart meter is clearly indicated in the manual. These live parts can be accessed during maintenance activities, especially when the lid is removed. This information is crucial for maintenance personnel as it allows them to take the necessary precautions to avoid electric shock or any other accidents.

## » 14.Technical support

Any questions, please contact:

TEL : 0044-161-6246211

Email : [sales@owen-brothers.com](mailto:sales@owen-brothers.com)